


DRAIN & RINSE

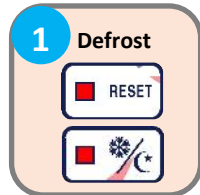

1 **Defrost**
Press RESET, then Press & Hold STANDBY for 3 Seconds



2
When Defrost Completed Press RESET, Remove Feed Tube




3
Remove Hopper Agitators, then Press WASH




4
Drain Product then Press RESET



5
Add 8 Liters (2.11 Gallons) Water to Hopper

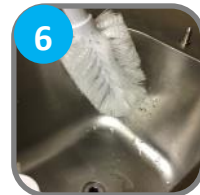

6
Scrub Sides and Bottom of Hopper

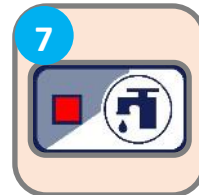

7
Press WASH



8
Drain Water then Press RESET



9
Repeat Steps 5-8 Until Water is Clear

DISASSEMBLE



1
Switch to OFF



2
Remove Dispensing Door Nuts (Diagonally)



3
Remove Dispensing Door Assembly



4
Remove Door Gaskets & Front Bearings



5
Remove Prime Plugs



6
Remove Handle Retention Nut & Pin



7
Remove Dispensing Handles & Draw Valves




8
Remove Seals



9
Remove Star Caps




10
A1
Remove Beater Assembly

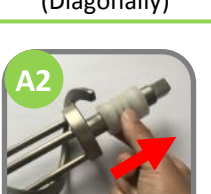


A2
Remove Seal from Beater



10
B1
Remove Beater Assembly

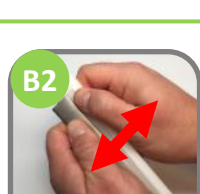

B2
Remove Scraper Blades and Separate from Scraper Clips

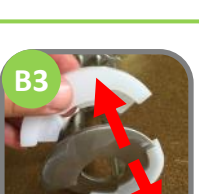

B3
Remove Beater Shoes



B4
Remove Drive Shaft & Seal



10
C1
Remove Beater Assembly



C2
Remove Beater Blades



C3
Remove Drive Shaft & Seal

Option A: Stainless Steel Beater

Option B: Flexible Blade Beater V1

Option C: Flexible Blade Beater V2

CLEAN




1
Remove & Clean Front Drip Tray



2
Remove & Clean Internal Drip Tray



3
Scrub Cylinders w/ Large Brush

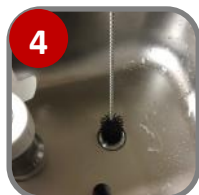

4
Scrub Hopper Feed Hole & Agitator




5
Scrub Prime Plug Ports w/ Brush



6
Wash All Parts Thoroughly



7
Wipe Down Cylinder w/ Clean Towel

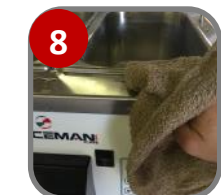

8
Wipe Down Exterior of Machine

ASSEMBLE


1



A1
Lubricate Seal on Both Ends



A2
Assemble and Install Beater Assembly



A3
Rotate to Lock in Place (Beater Fully Inside)

Option A: Stainless Steel Beater


1



B1
Install Drive Shaft Seal, Lubricate Drive Shaft and End of Seal (Shaded Area)



B2
Install Drive Shaft into Cylinder, Rotate to Lock in Place



B3
Install Beater Shoes




B4
Install Beater Blades into Beater Clips




B5
Assemble & Install Beater Assembly Rotate to Lock in Place (Beater Fully Inside)

Option B: Flexible Blade Beater V1


1




C1
Install Drive Shaft Seal, Lubricate Drive Shaft and End of Seal (Shaded Area)




C2
Install Drive Shaft into Cylinder, Rotate to Lock in Place



C3
Install Beater Blades




C4
Assemble & Install Beater Assembly




C5
Rotate to Lock in Place (Beater Fully Inside)

Option C: Flexible Blade Beater V2


2




2
Install & Lubricate Draw Valve & Prime Plug Seals



3
Install Prime Plugs



4
Install Draw Valves



5
Install Dispensing Handles

6



6
Install Handle Retention Pin & Nut



7
Install Star Caps



8
Install Door Gaskets and Front Bearings



9
Install Dispensing Door Assembly



10
Install Dispensing Door Nuts (Diagonally)



11
Lubricate & Install Hopper Agitators



12
Install Internal & Front Drip Tray

SANITIZE & ADD PRODUCT

1




1
Mix 8 Liters Sanitizer Solution Per Hopper




2
Pour Sanitizer Solution into Hoppers


3



3
Press RESET then Press WASH Wait 10 to 15 Minutes




4
Drain Sanitizer Solution then Press RESET




5
Thoroughly Prepare 7 to 16 Liters (1.85 to 4.23 Gallons) Product



6
Pour 1 Liter (0.26 Gallons) Product into Hoppers

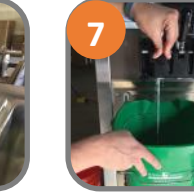


7
Open Dispensing Valve to Purge Sanitizer Solution




8
Pour in Remaining Product into Hoppers



9
Open Prime Plug Until Product Flows Out from Bottom Prime Port



10
Sanitize & Install Feed Tube & Hopper Lids



11
Press FREEZE