

CYCLOMOP™

www.cyclomop.com

SPIN MOP

For tips, hints and a full video instruction guide please visit our YouTube page

<https://www.youtube.com/user/BeachSalesProducts>



ASSEMBLY & QUICK START-UP GUIDE

MOP ASSEMBLY

Call 800-242-1378

STEP 1

Unpack the product. There should be the following contents:

- 1 - Bucket
- 1 - Mop Handle
- 1 - Mop Head
- 2 - Micro Fibre Cleaning Pads

STEP 2

 
Assemble mop handle and mop head.

Locate mop head and place connector section into vertical (locked) position.




STEP 3

Assemble mop handle and mop head, cont'd. Grip threaded collar and back completely off of mop head. Then back on to mop head with 2 full turns.

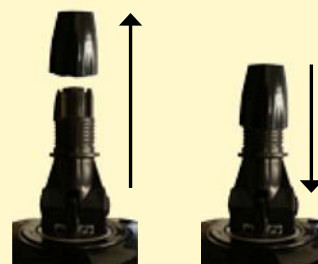

STEP 4

 Assemble mop handle and mop head, cont'd. Fully extend mop handle and turn center section to off position. This will lock handle in the longest position.

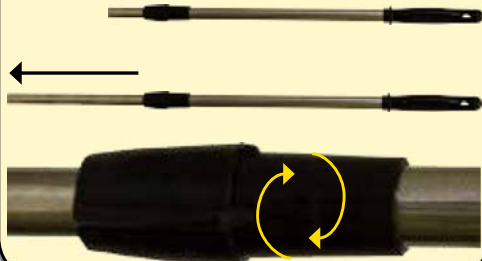


STEP 5

Assemble mop handle and mop head, cont'd. Place mop handle into mop head and tighten down collar until snug. **DO NOT** over tighten



STEP 6

 Assemble mop handle and mop head, cont'd. Place micro fibre cleaning pad on ground with black ring facing up. Center mop head over cleaning pad and press down. Secure cleaning pad by pressing down with foot on either side of the mop head.

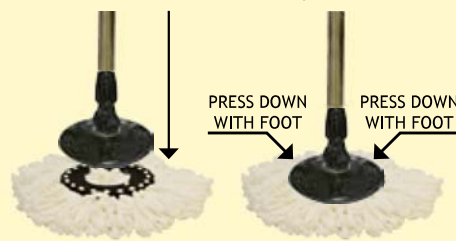

FOR A COMPLETE VIDEO TUTORIAL VISIT OUR WEBSITE AT:
WWW.CYCLOMOP.COM

Call 800-242-1378

USING YOUR NEW CYCLOMOP ON REVERSE SIDE.

STEP 1

Filling bucket

Fill bucket with a minimum of 1 gallon or a maximum of 2 gallons cleaning solution.



STEP 2

Preparing mop

Before wetting mop head in bucket, make sure mop is in vertical/locked position, and in off position.



STEP 3

External Spin Level

This lever is used to wet/clean mop head and also ring out the mop head.

 
To use pump lever down with foot.



STEP 4

Wetting Gear & Ringing Bucket


Use these to wet mop head and ring mop head dry.

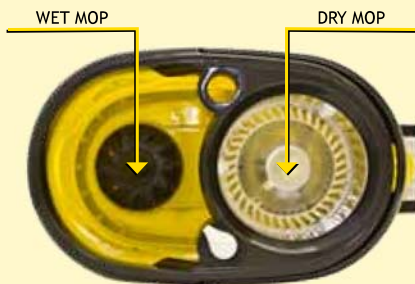

STEP 5

Wetting mop head

 Place mop over gear until it locks into place. Pump external lever with foot until mop is saturated. Repeat process to clean mop head.

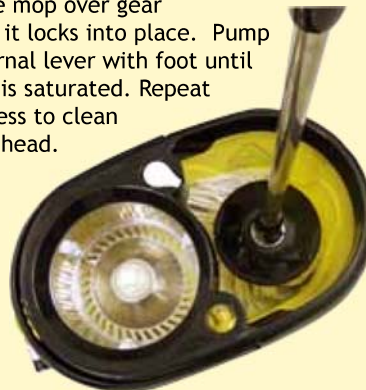

STEP 6

Ringing mop out

Place mop in stainless steel ringing bucket and pump external lever with foot until desired dryness. See next step for optional ringing method



STEP 6A

Ringing Mop out, opt.

 
Place mop head in stainless steel ringing bucket. Turn mop handle to on position and pump handle down to begin spinning mop head. Spin until desired dryness.



STEP 7

Mopping

Place mop head with cleaning pad flat on floor and step on either side of the mop head with foot. Push mop handle left or right to release lock position. You are now ready to mop! Happy Cyclomopping!

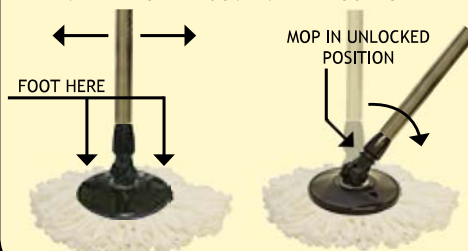

STEP 8

Storage

Ring out mop. Drain bucket using side drain. Collapse mop handle and lock it. Place Mop in holder located on bucket.



Removing and Caring for the Micro Fibre Cleaning Pads

To remove the cleaning pad 1. Pull it off with your hands or 2. While the mop is in the vertical locked position step on the mop head, press left or right while lifting up. NEVER PLACE IN THE DRYER! Allow the cleaning pad to air dry!

To wash the cleaning pad place in a washing machine with warm or hot water and detergent. Once again DO NOT PLACE IN THE DRYER.