

Duett (R3590) Standard Bath Tissue Dispenser Installation Instructions



The user is responsible for the proper installation and use of this dispenser.

Equipment needed: Measuring tape
 Level
 Drill & Drill Bit
 Screwdriver
 Pencil
 Eye Protection
 Appropriate fasteners (screws, bolts,
 anchors, washers, etc.) for mounting

1. Open unit using key. Key can be found taped to back of unit. Insert key into slot on top of unit and push down to release cover.
2. Determine position on wall/surface with unit open. Through holes at the back of the unit, use pencil to mark the spots where the drilling will be necessary.
3. You will need to provide six (6) fasteners for mounting. Minimum recommended fastener head size #10 sheet metal or wood screw.
4. Drill the marked spots on the wall/surface with appropriate drill bit.
5. Complete installation. Be sure to use fasteners (and anchors) that are appropriate for the wall/surface to which the dispenser will be mounted. Mounting using all six (6) holes is required for proper function of the dispenser.

DISPENSER OPERATION:

1. To fill dispenser after mounting: Insert key in slot at top of unit and push down. Cover will open forward. Insert rolls of tissue on each mandrel. Close cover.
2. When bottom roll is empty, push down on door handle, until door locks into place.
3. To replenish rolls: Open cover, using key. *Door will automatically reset in the upper position.* If there is still paper on the upper roll, move to bottom. Place new roll in upper position. Close Cover.

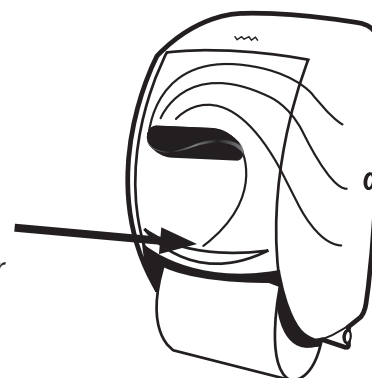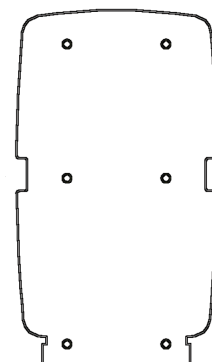

Product Code Date location: Open dispenser, take out any paper. Look in back center of dispenser for two (2) circles molded into the back of the unit. Right circle arrow points to Month, with year in center of circle. Left circle is Day of Month. Each circle will have an arrow pointing at a number designating either the month or day.

