


SAN JAMAR element™ TOWEL DISPENSER INSTRUCTIONS

HANDLE INSTALLATION INSTRUCTIONS

1. Remove key from the back of dispenser.
2. Remove sticker from cover and open dispenser.
3. Remove handle from inside of dispenser.
4. While the cover is open, snap handle onto small piece on right side of dispenser. Push in until you hear the handle snap into place.

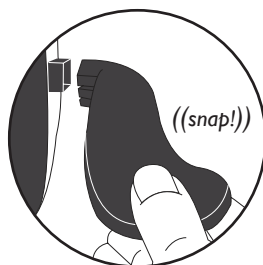


MOUNTING INSTRUCTIONS (Dispenser must be mounted level)


The user is responsible for the proper installation and use of this dispenser.

Note: Hardware may not be included with your product. If hardware is factory supplied, refer to mounting instructions located in hardware pack.


PAPER LOADING

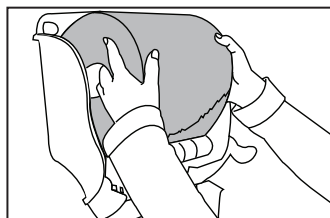


Step 1 Open cover.
Insert roll towel.

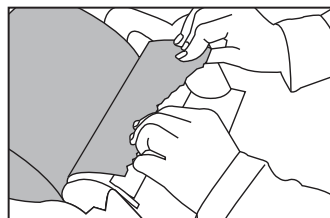

Step 2 Pull down and drape so that paper is hanging off the back of the roll.

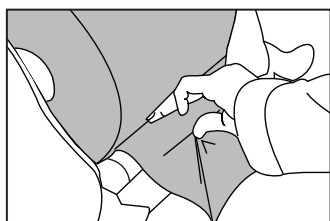

Step 3 Pinch paper by rolling between two rollers.

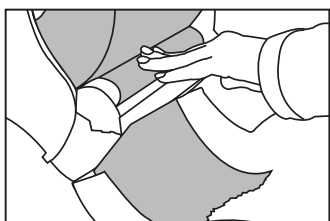

Step 4 Activate lever to feed paper through rollers. Close cover.

Equipment needed:

Measuring tape, level, screwdriver, eye protection, pencil, drill and drill bit suitable for appropriate wall mounting hardware. Assemble appropriate fasteners (screws, bolts, anchors, washers, etc.) for mounting.

1. Determine position on wall/surface with unit open. Through the holes at the back of the unit, use pencil to mark the spots where the drilling will be necessary. Be sure unit is level before marking holes. **WARNING: Proper function of this dispenser requires level mounting.** Try to mark spots as close as possible to the outer edges. Mount upper center hole first.
2. Drill the marked spots on the wall/surface with appropriate sized drill bit suitable for the wall material and fasteners used.
3. Complete the installation. Be sure to use fasteners (and anchors) in all mounting holes that are appropriate for the wall/surface to which the dispenser will be mounted. The installation should be done with a flat washer between the head of the fastener and the inside back of the dispenser.

San Jamar
Chef Revival
555 Koopman Lane
Elkhorn, Wisconsin 53121
USA
T: +1.262.723.6133
F: +1.262.723.4204
info@sjcr.com

SJCR Canada
3300 Bloor Street West
Center Tower, 11th Floor, Suite 3140
Toronto, ON M8X 2X3
CANADA
T: +1.416.760.7367
F: +1.416.207.2071
canada@sjcr.com

SJCR Europe
Schoorstraat 26A, bus-1
2220 Heist op-den Berg
BELGIUM
T: +32 1522 8140
F: +32 1522 8148
emea@sjcr.com



SJCR México
Av. Universidad #1377-701
Colonia Axotla CP 01030
Del. Álvaro Obregón
MÉXICO, D.F.
T: +52 (55) 3626 0772
F: +52 (55) 5273 4495
mexico@sjcr.com

SAN JAMAR
Smart ♦ Safe ♦ Sanitary

101838

INSTRUCCIONES PARA LA INSTALACION DE LA MANIJA

1. Remueva la llave de la parte posterior del dispensador.
2. Quitar la etiqueta de la tapa y abrir dispensador.
3. Saque la manija del dispensador.
4. Mientras la tapa esta abierta, insertar la manija sobre la pieza pequeña al lado derecho del dispensador. Empujar hasta escuchar la manija encajar en lugar.

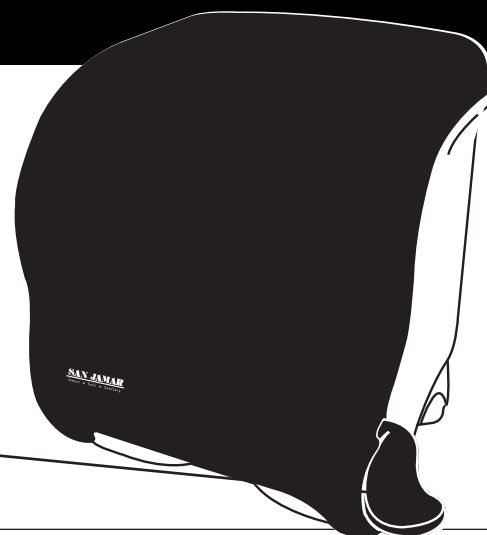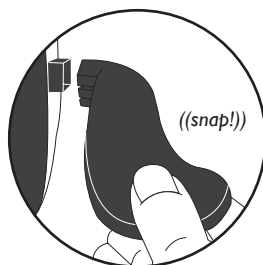

INSTRUCCIONES DE MONTAJE (El dispensador debe estar a la altura del montaje)

(El usuario es responsable de la instalación correcta del dispensador).


NOTA: Algunas herramientas no estan incluidas con el producto. Si las herramientas son suministradas por el fabricante, lea las instrucciones de montaje ubicadas en el paquete de herramientas.

HERRAMIENTA:


Cinta métrica, nivelador, desarmador, protección para los ojos, lápiz, taladro y piezas para montar sobre la pared. Tornillos, anclas, etc. para montaje.

1. Seleccione la posición sobre la pared/superficie con la unidad abierta. A través de los orificios en el respaldo de la unidad, marque con un lápiz el lugar en dónde se perforará. Asegure que la unidad este nivelada antes de marcar los orificios. **ADVERTENCIA: La función apropiada de este dispensador requiere que la unidad este nivelada.** Trate de marcar los orificios lo más cercano posible a las orillas. Montar colocando centro superior primero.
2. Taladre los orificios marcados en la pared/superficie con las broquetas apropiadas al tipo de material.
3. Complete la instalación. Asegurese de que los sujetadores (y anclas) en todos los orificios de montaje sean apropiados para la pared/superficie en donde se monta. La instalación deberá ser efectuada en una superficie limpia y contra el respaldo del dispensador.


CARGA DE PAPEL

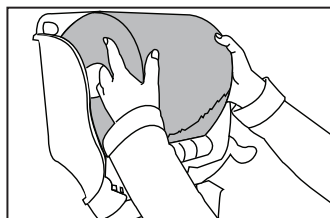


Paso 1 Abra la cubierta. Inserte la toalla en rollo.

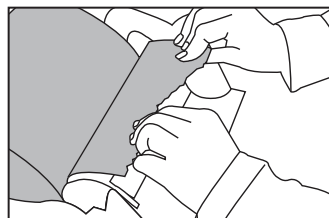

Paso 2 Colóquelo hacia abajo de tal manera que el papel cuelgue.

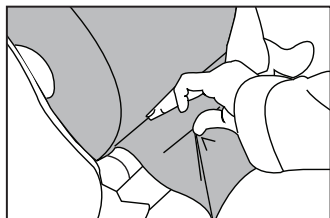

Paso 3 Inserte el papel entre los rodillos.

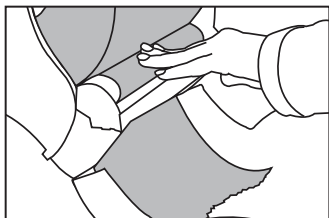

Paso 4 Activar palanca para pasar papel por los rodillos. Cerrar la tapa.

San Jamar
Chef Revival
555 Koopman Lane
Elkhorn, Wisconsin 53121
USA
T: +1.262.723.6133
F: +1.262.723.4204
info@sjcr.com

SJCR Canada
3300 Bloor Street West
Center Tower, 11th Floor, Suite 3140
Toronto, ON M8X 2X3
CANADA
T: +1.416.760.7367
F: +1.416.207.2071
canada@sjcr.com

SJCR Europe
Schoorstraat 26A, bus-1
2220 Heist op-den Berg
BELGIUM
T: +32 1522 8140
F: +32 1522 8148
emea@sjcr.com

SJCR México
Av. Universidad #1377-701
Colonia Axotla CP 01030
Del. Álvaro Obregón
MEXICO, DF
T: +52 (55) 3626 0772
F: +52 (55) 5273 4495
mexico@sjcr.com

SAN JAMAR
Smart ♦ Safe ♦ Sanitary

101838