

Recessed Roll Towel Dispenser New Wall Installation Instructions

TOOLS REQUIRED FOR INSTALLATION

Roto-Zip (or similar tool to cut the dry wall)	Flashlight	Level	Safety Glasses
	Mirror	Screw Driver	Measuring tape
	Stud Finder	Pencil	



Locate the general area where the dispenser is to be installed. The dispenser frame fits into a 14 1/2" wide by 13 1/4" high by 4" deep pocket. Minimum stud width is 16" on center.

Mark a location that is 48" from the floor.



Using a stud finder, find and mark the inside edges of the stud cavity where the dispenser will be mounted.



Draw a level line at the mark from the floor, between the inside edges of the stud cavity. This will be the bottom of the hole cut out.

Measure up 13 1/4" from the level line. This will be the top of the hole cut out. Draw a level line, at the mark from the bottom edge of the cutout, between the inside edges of the stud cavity.



Cut a circular hole in the center of the cutout area to inspect the stud cavity.


Using a flashlight and a mirror look for electrical or plumbing in the cavity. If none are present, proceed with the next step. If there is an interference because of electrical or plumbing, find a different location.



Remove the drywall from the cutout area using the Roto-Zip or similar tool.



Open the dispenser with the key and place the dispenser into the wall cutout. Attach dispenser to the wall studs using 4 screws through the screw bosses.

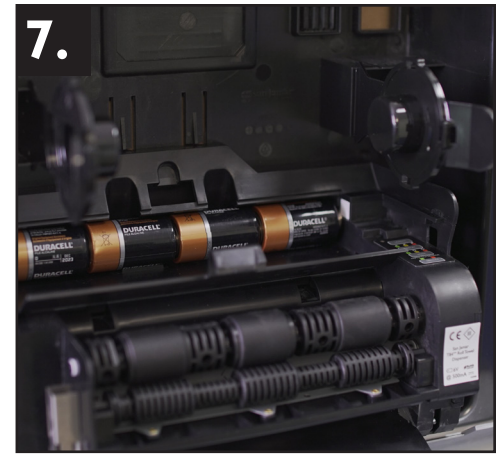

Load 4 D-cell Alkaline batteries as shown. Batteries must be loaded in the correct orientation, with positive end towards the left. If batteries are not loaded correctly, unit will not function.



Load paper onto hubs. Pull down and drape so that paper is hanging off the back of the roll. Pinch paper by rolling between two rollers. Close cover. Dispenser will feed the first sheet and is ready to use.



Dispenser will feed the first sheet and is ready to use.

TEAR-N-DRY RECESSED ROLL TOWEL DISPENSER AVAILABLE:

T8006BKADA - RECESSED ROLL TOWEL - TEAR-N-DRY - 6" - BLACK
 T8006SSADA - RECESSED ROLL TOWEL - TEAR-N-DRY - 6" - STAINLESS LOOK
 T8008BKUNV - RECESSED ROLL TOWEL - TEAR-N-DRY - 8" - BLACK
 T8008SSUNV - RECESSED ROLL TOWEL - TEARN-N-DRY 8" - STAINLESS LOOK

SMART SYSTEM RECESSED ROLL TOWEL DISPENSER AVAILABLE:

T8406BKADA - RECESSED ROLL TOWEL - SMART SYSTEM - 6" - BLACK
 T8406SSADA - RECESSED ROLL TOWEL - SMART SYSTEM - 6" - STAINLESS LOOK
 T8408BKUNV - RECESSED ROLL TOWEL - SMART SYSTEM - 8" - BLACK
 T8408SSUNV - RECESSED ROLL TOWEL - SMART SYSTEM - 8" - STAINLESS LOOK

Questions? Please
 call customer care at
 1-800-248-9826 or visit our
 website: www.sanjamar.com

San Jamar
 555 Koopman Lane
 Elkhorn, Wisconsin 53121
 USA
 T: +1.262.723.6133
 F: +1.262.723.4204
info@sanjamar.com
www.sanjamar.com

Canada
 15252 32nd Avenue
 Suite 309
 Surrey, BC V3S 0R7
 CANADA
 T: +1.262.723.6133
 F: +1.262.723.4204
canada@sanjamar.com

Europe
 Schoorstraat 26a, bus 1
 2220 Heist op-den Berg
 BELGIUM
 T: +32 15 22 81 40
 F: +32 15 22 81 48
emea@sanjamar.com

México
 Av. Paseo de la Reforma No. 350 - 10
 Col. Juárez
 Deleg. Cuauhtemoc, CP 06600
 MEXICO, D.F.
 T: +52 (55) 3626 0772
mexico@sanjamar.com

san jamar®
 smart. safe. sanitary.