



CLUC Overshelf Field Installation Instructions

Available For All Compact Units


1. UNPACK OVERSHELF

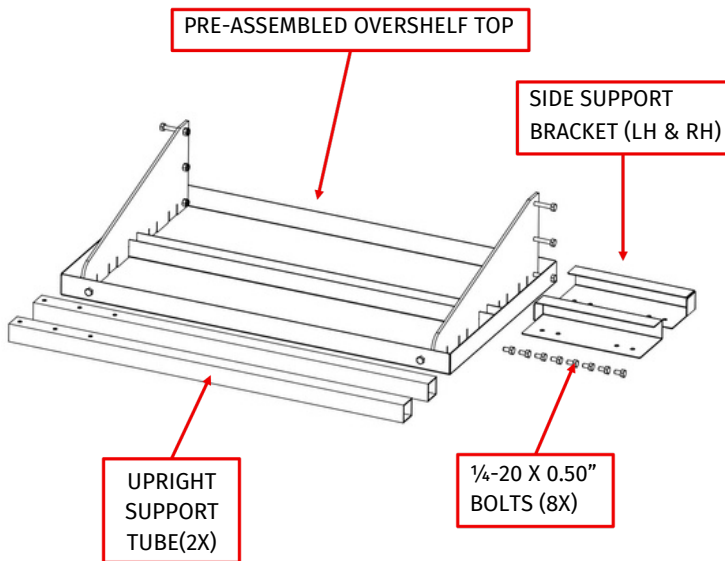


3. INSTALL SIDE SUPP BRACKET. DO NOT TIGHTEN. BOTH SIDES

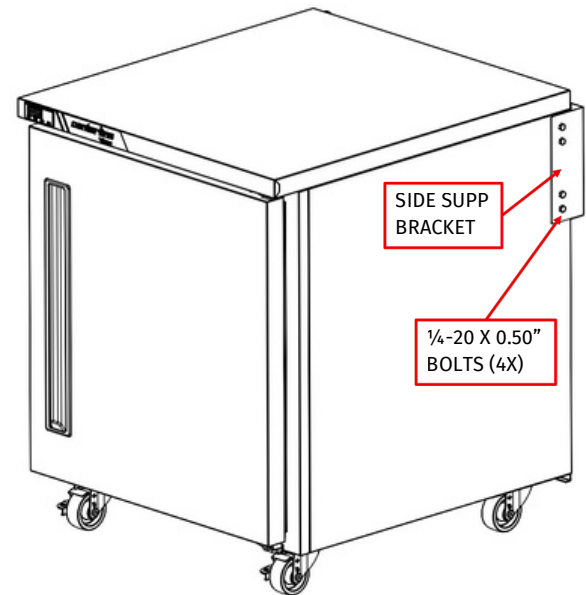

2. REMOVE 4 PLUGS ON SIDE OF UNIT (BOTH SIDES) AND BUMPERS IN BACK OF UNIT.

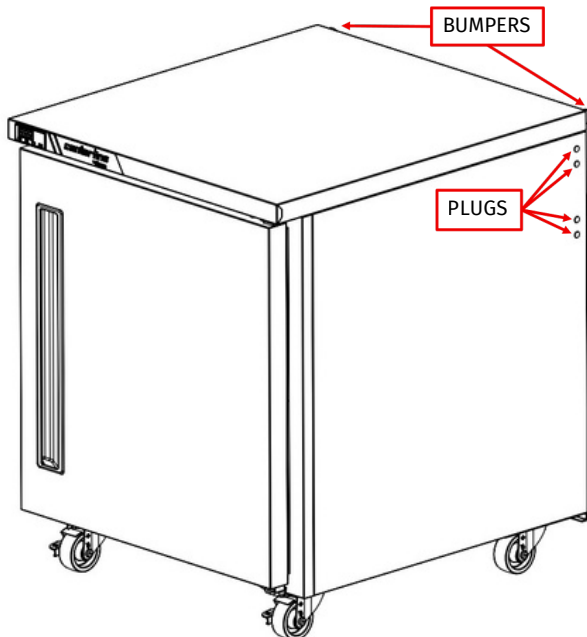


4. REMOVE 1.875" BOLTS AND LOCKNUTS.

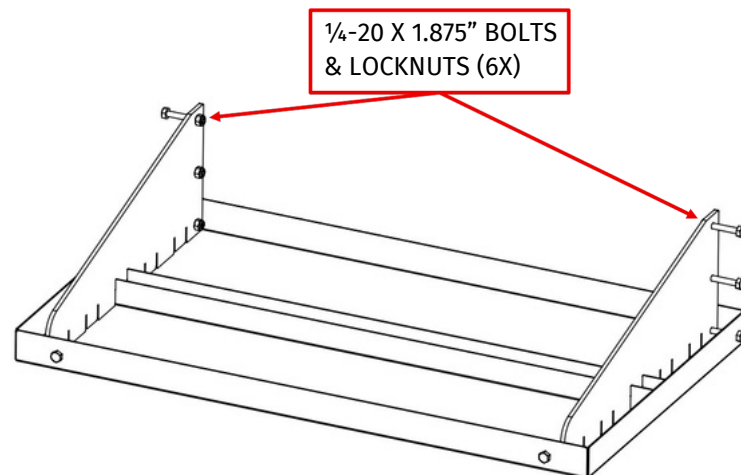


See Back For Additional Instructions


5. INSTALL UPRIGHT SUPP TUBE WITH 1.875" BOLTS. TIGHTEN BOLTS & LOCKNUTS.

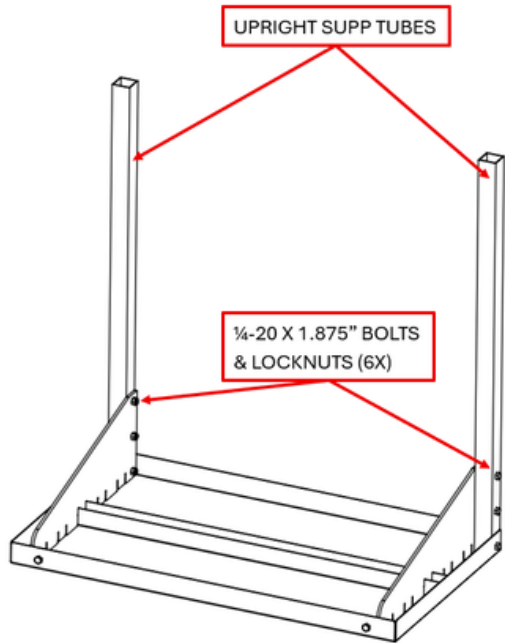


7. LOWER OVERSHELF INTO SIDE SUPP BRACKET OPENINGS.

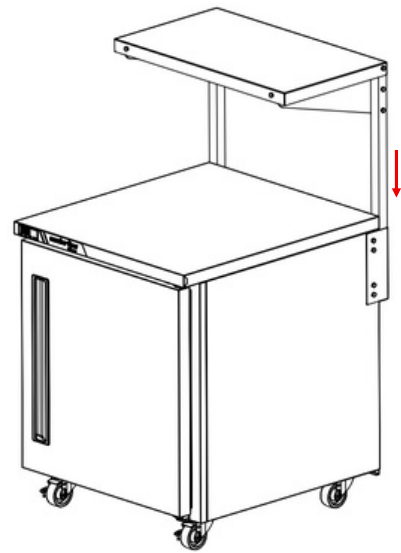

6. ROTATE OVERSHELF TO UPRIGHT POSITION AND ALIGN WITH SIDE SUPP BRACKETS.

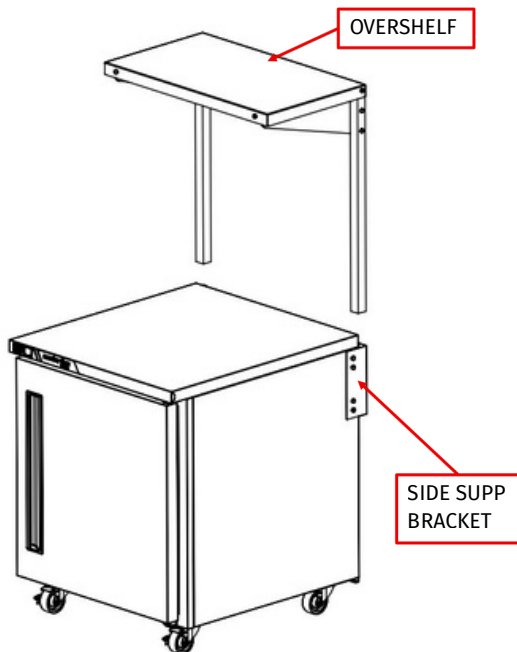

8. APPLY FORCE TO SUPP BRACKETS FORWARD TO ENSURE TUBE IS FLUSH WITH CABINET. TIGHTEN BOLTS WHILE APPLYING FORCE. (BOTH SIDES)

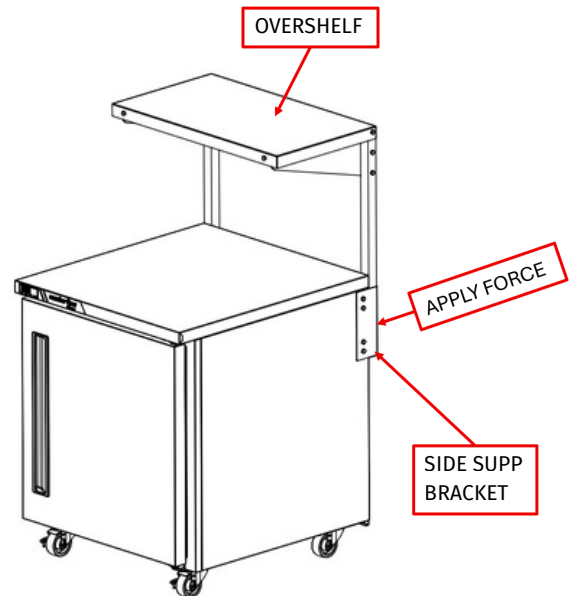

Need Service or Support?

If you require assistance, please contact Centerline's Service Department directly:

☎ 1-800-825-8220

✉ service@traulsen.com