



**Star
Manufacturing
International Inc.**

265 Hobson St.
Smithville, TN 37166

Phone: (800) 264-7827
FAX: (314) 781-2714

Installation Kit Instructions

2M-60902-14 Rev. A 06/2019

This kit 2E-60101-67 provides detailed instructions and the parts necessary to complete the installation of the 208/240VAC electrical cord on the ECCO oven.

ECCO 208/240 Cord Kit		
Quantity	Part Number	Description
1	2E-31106-02	7 ft. 6/4 Service Oil Resistant (SO) cord with 15-50 cord cap (attached)
1	OB-31203-06	15-50 Receptacle
1	OB-70801-23	Strain Relief Cord Connector, T&B 2558
3	2C-31301-07	Wirenuts
1	2M-60902-14	Kit, Instruction
* Stainless steel receptacle cover not provided.		

WARNING

A qualified electrician should perform the following procedure. Failure to comply may result in personal injury and/or death.


NOTE

The recommended junction box dimensions are 4 11/16th x 2 1/8th.

1. Install the 15-50 receptacle into a wall junction box per standard electrical and safety practices.



2. Install a stainless steel receptacle* cover on the junction box.
3. Locate and remove the access panel on the back of the oven.

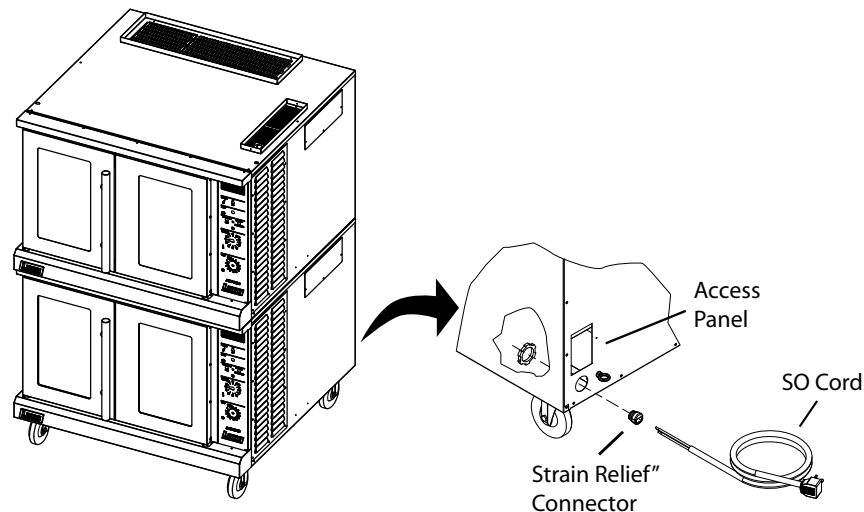

4. Insert the loose wires of the SO cord into the access opening of the oven.
5. Push the strain relief connector against the back of the oven until flush.
6. Install the locknut onto the strain relief connector. Do not tighten at this time.
7. Identify the four (4) white wires numbered five (5), six (6), seven (7) and eight (8).
8. Connect the wires as shown in the following table.

Wire Connections	
Black	#5 and #8
Red	#6
Blue	#7
Green	Chassis Ground Lug

9. Adjust the SO cord allowing approximately six (6) feet of cord between the Strain Relief Compression nut and the end of the cord.
10. Tighten the strain relief connector hand tight.
11. Plug cord into receptacle, turn on breaker and oven.